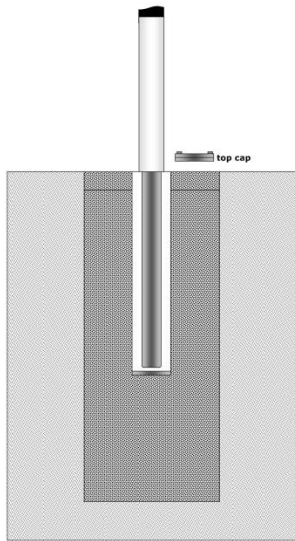


SPIGOT BASE (WITH OPTIONAL GROUND SLEEVE)

Footing Arrangement
Section Through Base

**PRODUCT INCLUSIONS**

- 4 x 6m goal posts.
- 2 x 5.5m (league) or 5.6m (union) crossbars with brackets.
- 4 x PVC ground sleeves and 8 x top caps.
- 4 x S/S M6 security screws.

FOOTING ASSEMBLY (per post)

- Measure 5.56m (league) or 5.66m (union) centres between posts.
- Dig a 75cm deep x 35cm diameter footing hole.
- Keep diameter of hole even to avoid a bowl shape at bottom.
- Fill with 20MPA semi-wet concrete 5cm below ground level.
- Sink sleeve into concrete with end marked at base.
- Sleeve centres are to match post hole centres (step 1).
- Distance between inside of posts must be exactly 5.5m (league) or 5.6m (union) for crossbar to attach properly.
- Do not sink sleeve below top of concrete level.
- Top of sleeve is 2.5cm above concrete / 2.5cm below ground.
- Level using a spirit level against inside sleeve.
- Ensure sleeve is properly levelled before concrete sets.
- Leave footing to cure for a minimum of 48hrs.
- Carefully put cap on sleeve and cover with loose soil.
- Remove cap and stand post into sleeve.
- Secure post to sleeve with M6 security screw.

CROSSBAR ATTACHMENT

- Attach crossbar to posts with brackets by having 1 person on a step ladder at each goal post.
- Set the height of the cross-bar at 3m from ground level to the top side of the cross-bar.